




Parts Drawing #1

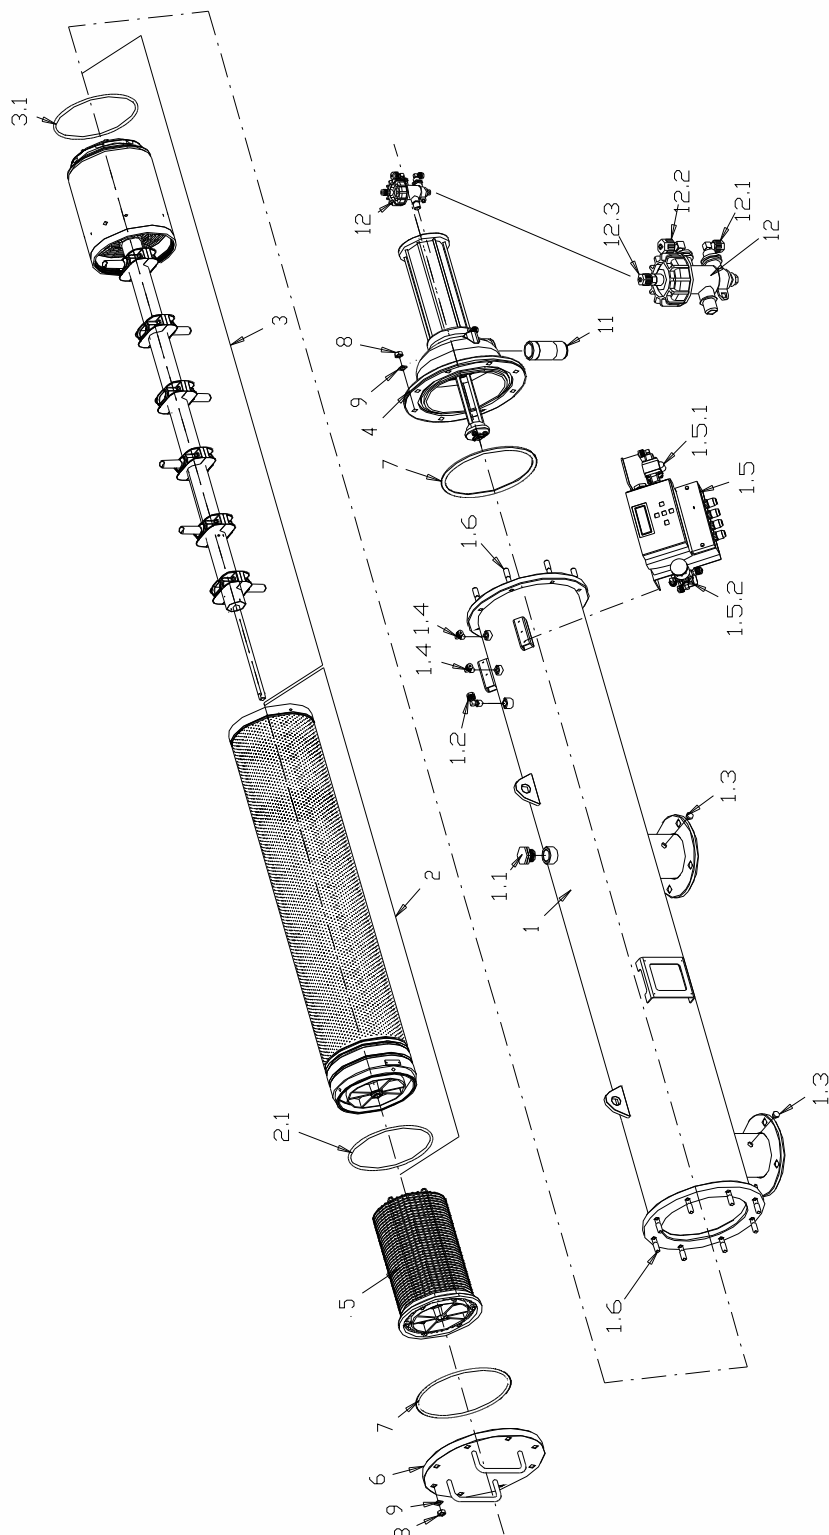


Parts Drawing #2

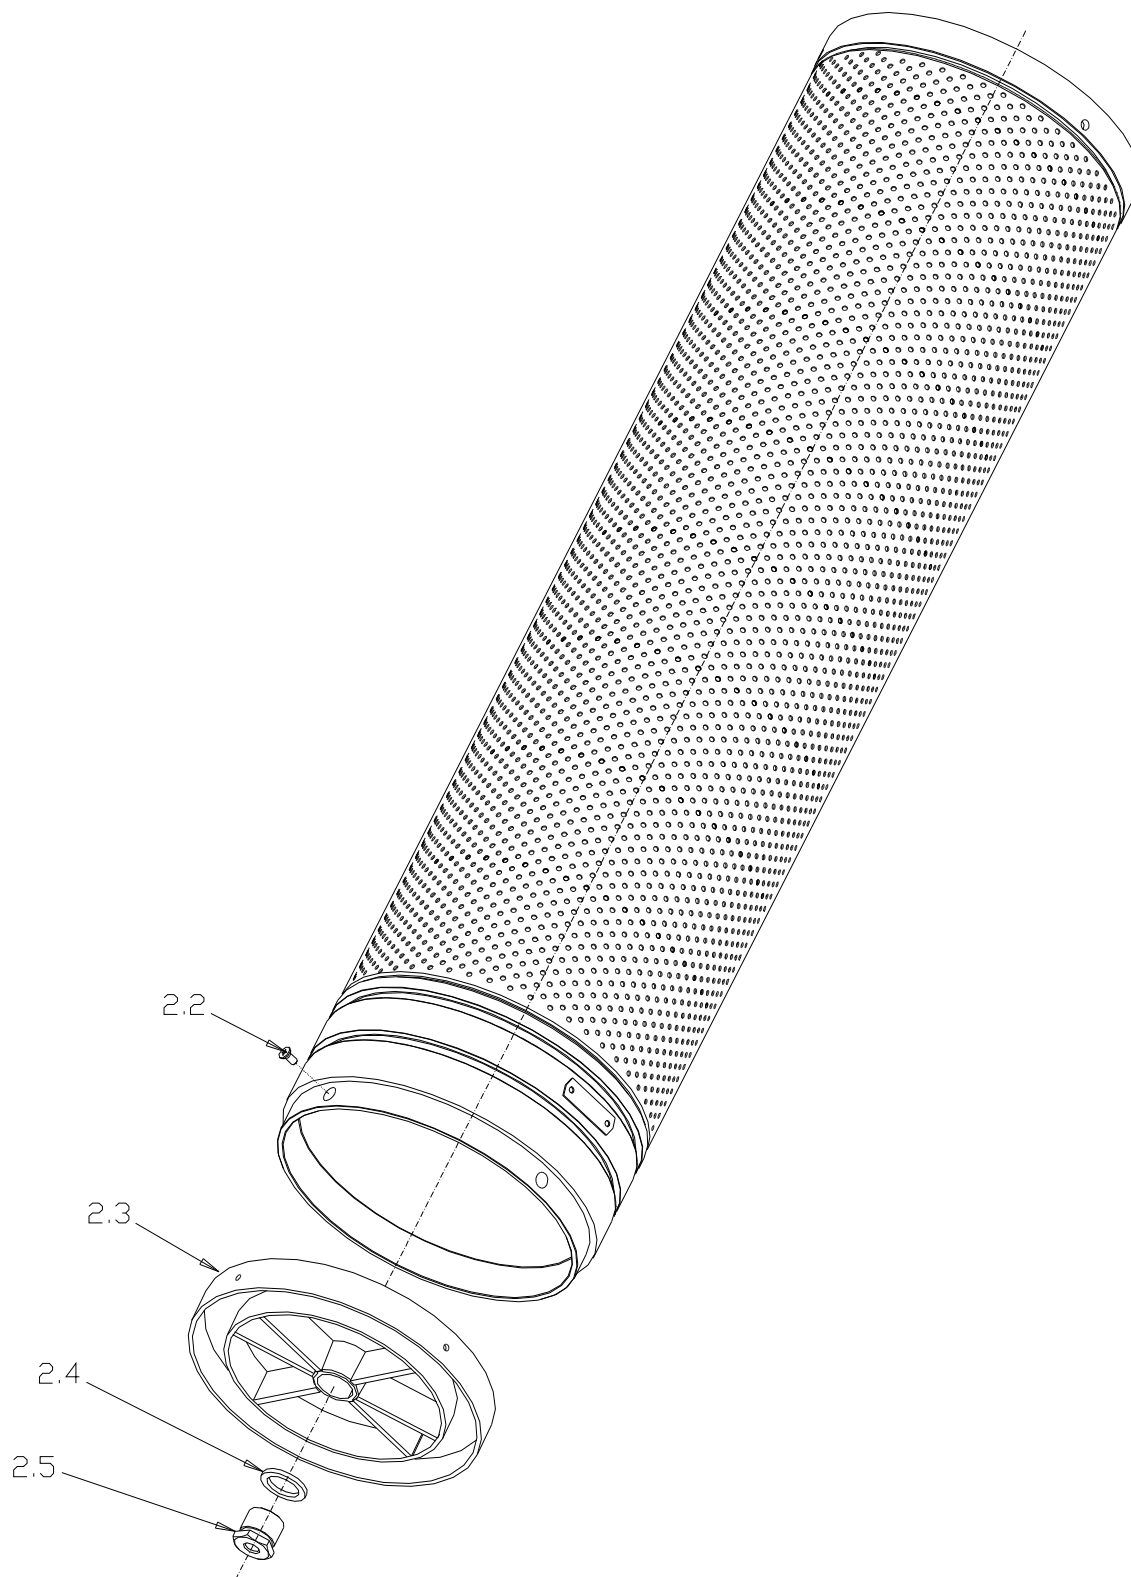

Parts Drawing #3

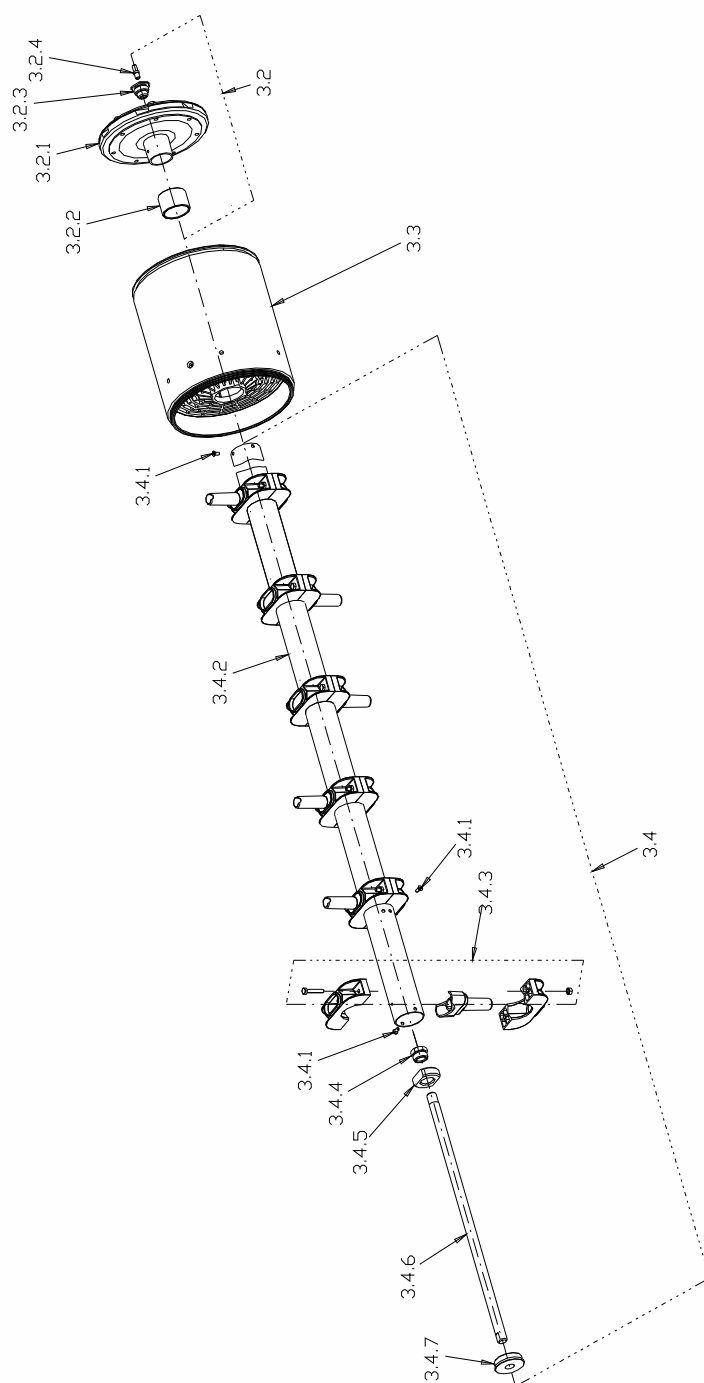

Parts Drawing #4

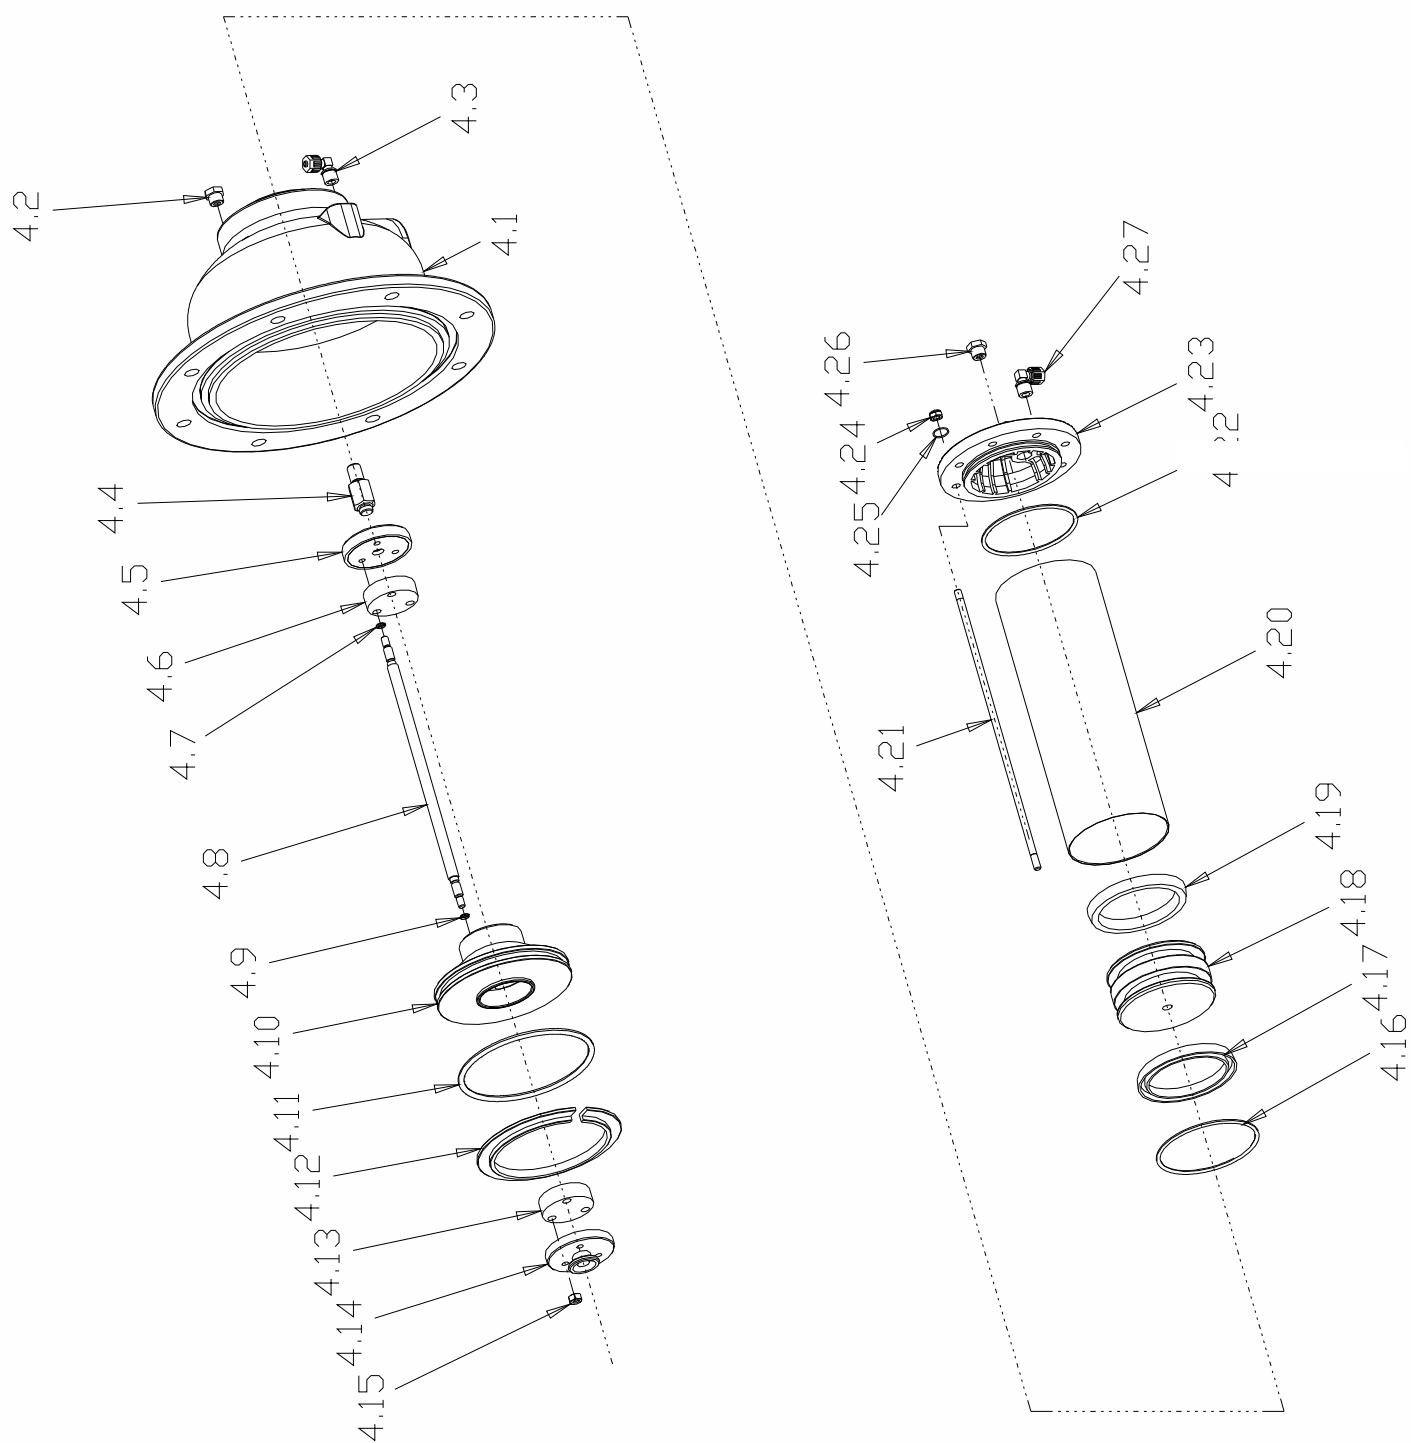

M108LP Part List



No.	Description	Cat. No.
1	Filter housing 108LP	6800-H-0001
1.1	Plastic plug 1"	6800-H-0002
1.2	L-Connector 3/8" X 12	6800-H-0003
1.3	Plastic plug 1/4"	6800-H-0004
1.4	L-Connector 1/4" X 6	6800-H-0005
1.5	Control Panel	6800-H-0006
1.5.1	PD switch UE 24-011	6800-H-0007
1.5.2	Solenoid 24 VAC "NC" 60 Hz	6800-H-0008
1.6	Stud bolt 1/2" X 50 (X16)	6800-H-0009
2	Fine screen 108LP	6800-H-0010-080
	Fine screen 108LP	6800-H-0010-100
	Fine screen 108LP	6800-H-0010-130
	Fine screen 108LP	6800-H-0010-200
	Fine screen 108LP	6800-H-0010-300
	Fine screen 108LP	6800-H-0010-500
2.1	O-Ring 647	6800-H-0011
2.2	Handle bolt 108LP	6800-H-0012
2.3	Handle 108LP	6800-H-0013
2.4	Spacer disc	6800-H-0014
2.5	Fine screen bearing	6800-H-0015
3	Dirt collector ass. 108LP	6800-H-0016
3.1	O-Ring 647	6800-H-0017
3.2	Rotor assembly	6800-H-0018
3.2.1	Rotor	6800-H-0019
3.2.2	Rotor adaptor	6800-H-0020
3.2.3	Rotor bearing housing	6800-H-0021
3.2.4	Lower Bearing	6800-H-0022
3.3	F. chamber	6800-H-0023
3.4	Dirt collector 108LP	6800-H-0024
3.4.1	Bolt 3/8" X 8	6800-H-0025
3.4.2	Dirt collector pipe 108LP	6800-H-0026
3.4.3	Nozzle assembly	6800-H-0027
3.4.4	Collector connecting bolt	6800-H-0028
3.4.5	Support bolt	6800-H-0029
3.4.6	Dirt collector shaft	6800-H-0030
3.4.7	Dirt collector top plug	6800-H-0031
4	Piston lid assembly (CI)	6800-H-0032
4.1	Piston lid	6800-H-0033
4.2	Plastic plug 1/4"	6800-H-0034
4.3	L-Connector 1/4" X 6	6800-H-0035

M108LP Part List



No.	Description	Cat. No.
4.4	Piston shaft	6800-H-0036
4.5	Exhaust valve seat	6800-H-0037
4.6	Disc seal seat	6800-H-0038
4.7	O-Ring P2-009	6800-H-0039
4.8	Rod	6800-H-0040
4.9	O-Ring P2-009	6800-H-0041
4.10	Exhaust valve seat	6800-H-0042
4.11	O-Ring P2-351	6800-H-0043
4.12	Locking ring	6800-H-0044
4.13	Disc seal seat	6800-H-0045
4.14	Bearing	6800-H-0046
4.15	St. St. Nut 1/4"	6800-H-0047
4.16	O-Ring P-237	6800-H-0048
4.17	U-Ring 95X75X10	6800-H-0049
4.18	Seal holder	6800-H-0050
4.19	U-Ring 95X75X10	6800-H-0051
4.20	St. St. Cylinder	6800-H-0052
4.21	Piston rod tie	6800-H-0053
4.22	O-Ring P-237	6800-H-0054
4.23	Piston lid	6800-H-0055
4.24	St. St. Lock nut 1/4"	6800-H-0056
4.25	St. St. Washer M6	6800-H-0057
4.26	Plastic plug 1/4"	6800-H-0058
5	Coarse screen 108LP	6800-H-0059
6	Filter lid	6800-H-0060
7	Lid seal	6800-H-0061
8	Nut 1/2" (X 16)	6800-H-0062
9	Washer 1/2" (X 16)	6800-H-0063
11	Nipple 1 1/2" NPT	6800-H-0064
	Nipple 1 1/2" BSP	6800-H-0065
12	Hydraulic relay 25-300	6800-H-0066
12.1	L-Connector 3/8" X 8	6800-H-0067
12.2	L-Connector 3/8" X 12	6800-H-0068
12.3	Connector 1/8" X 6	6800-H-0069